



HYPPO

Code HY7005

Description Electrical actuator irrever.

Position	Code	Spare part description
1	PPD1177.4540	Motor Lid
2	BMMHA.45673	Unlocking handle
3	PPD1011R01.45401	Guscio sup.maniglia signo ser.
4	MPPM.2601	Microswitch protection
5	CM-B.1630	Key lock
6	MP0031.2601	Ferrule
8	R04E.5120	Washer
9	V4X5.5102	Screw
10	V3X12-A.5102	Screw
11	GOR-F.5501	Packing
12	V4.2X9.5101	Screw
13	BMGB.4567	Shell
14	BMGB.45672	Shell
15	V6.3X25.5101	Screw
16	GOR4.5501	Packing
17	PMD0219R06.4610	Gear
18	PMCSE25.4630	Seeger ring
19	PMCU3.4630	Bearing
20	PMCAC1.4630	Ring
21	PMD1229.4610	Gear
22	PMCBR1.4630	Brass
23	PMDAIP.4610	Shaft
24	PMDCE.4610	Rim Gear
25	PMCSE15.4630	Seeger ring
26	PMC66B.4630	Cotter
27	MO-1263.2640	Spring
28	PEDS501.4650	Stator
29	PECR50BR02.4670	Rotor
30	PMCU102.4630	Bearing
31	PPD0231.4610	Case
32	PMD0217.4610	Unlocking pin
33	PMD0216A.4610	Unlocking rod
34	PMD0014C.4610	Cam
35	G6X6.5123	Grub screw
36	PMDPS2.4610	Unlocking pin
37	BMMP.4567	Cable bracket
39	MO-P.2640	Spring
40	V4.2X9.5.5101	Screw
41	BPME.4540	Cam
42	V3X12.5102	Screw
43	D3-B.5102	Nut
44	MICROI-B.1617	Microswitch
45	V2.9X38.5101	Screw
46	CFHY.5320	Wiring
47	MPFB3.2601	Wrapper
48	PMD0225.4610	Flask
49	V2.9X9.5-A.5101	Screw
50	M12V.1850	Junction-box
51	V10X40.5102	Screw
52	35.010	condenser
54	MMCOI.2620	Thimble
55	V4X8.5105	Screw
56	EMH.4870	Label
57	PMD0215A.4610	Fixing plate
58	MP003.2601	Wire press
59	V4.8x9.5.5101	Screw
60	V10X50.5102	Screw
61	R10A.5120	Washer
62	PMD0654.46103	Straight Arm
63	PMD0655.46103	Curved arm
64	PMD0755.46103	Flask
65	V8X30A.5102	Screw
66	R10F.5120	Washer
67	D10I.5110	Nut
68	V8X35A.5102	Screw
69	R08A.5120	Washer
72	PPD0345.4610	Sleeve
73	PMCAC4.4630	Ring
74	D8.5110	Nut
75	R8.5120	Washer
79	V2.9X16.5101	Screw
80	CGU8B.5310	Protective covering