



RO1000

Code RO1000

Description Actuator built-in control unit

Position	Code	Spare part description
1	BMAM.4567	Anchorage calotte
2	BMBM.45673	Gear motor base
3	BMFP.45673	External flange
4	BPCO1.4540	Motor Lid
5	BPCO2.4540	Central box Lid
6	PPD1184.4540	Box
7	BPC.4540	Hole lid
8	BPMSR01.4541	Unlock
9	PMDVSFR11.4610	Vite s.fine "robo" modulo 2,5 c45 foro 20 dis.108/95
10	PMD0885.4610	Flask
11	PMD0886.4610	Flask
12	PMPS2.4610	Unlocking pin
13	PMDRC3.46102	Driven wheel
14	PMDACR08.4610	Shaft
15	PMD0177R01.4610	Cog wheel
16	PMD0213.4610	Fixing plate
17	PEDS671.4650	Stator
18	PECR67.4670	Rotor
19	ROA3	Control Unit
20	TRA-G.1025	Transformer
21	14U450.0727	Capacitor
22	MO-D.2640	Spring
23	MO-N.2640	Spring
24	CFCS.5320	Wiring
25	CT200.5320	Wiring
26	CGU6A.5310	Guaina pvc nero diam. 6 mm tagliata l=85 mm
27	C3VF.2015	Female connector
28	MICROI.1617	Microswitch
29	MMCOI.2620	Thimble
31	MPFB1.2601	Wrapper
32	MPFB3.2601	Wrapper
34	GOR-L.5501	Packing
35	GOR-H.5501	Packing
36	GOR9.5501	Packing
37	PMCU7.4630	Bearing
38	PMCU4.4630	Bearing
39	PMCU3.4630	Bearing
40	PMCAC1.4630	Ring
41	PMCSE25.4630	Seeger ring
42	PMC108A.4630	Cotter
43	PMCS8.4630	Pin
44	PMCSS.4630	Pin
45	PMCS6.4630	Pin
46	V6X80.5102	Screw
47	V4.2X13.5101	Screw
48	V2.9X9.5-A.5101	Screw
49	V4.8X16.5101	Screw
50	V3.5X20.5101	Screw
51	V4.2X9.5.5101	Screw
52	V2.9X16.5101	Screw
53	V4X8.5105	Screw
54	V4X5.5102	Screw
55	V4.2X9.5.5101	Screw
56	V8X35C.5102	Screw
57	V6X12B.5102	Screw
58	D8.5110	Nut
59	D8-G.5110	Nut
60	G6X14.5123	Grub screw
61	G8X40.5123	
62	R04E.5120	Washer
63	R08.5120	Washer
64	R08A.5120	Washer
65	R12C.5120	Washer
66	V10X12A.5102	Screw
67	PPD1182.4540	Housing for microswitch
68	PPD1183.4540	Cap
69	PPD1185.4540	Sleeve
70	PMCAC.4630	Ring