



SIGNO 6

Code SIGNO6

Description Barrier galvanised steel paint.case

Position	Code	Spare part description
1	BMG0719.4567	Reducer shell
2	BMG0720.45672	Body shell
3	BMMHA.45673	Unlocking handle
4	BPME.4540	Cam
5	CA29.5330	Wiring
6	CFW.5320	Wiring
7	CM-B-1010.1630	mec key selector 90ø2251bis
8	CT200C.5320	Wiring
9	D10.5110	Nut
10	D10A.5110	Nut
11	D12.5110	Nut
12	D12B.5110	Nut
13	D3-B.5102	Nut
14	D4-D.5110	Nut
15	D6.5110	Nut
16	GOR-F.5501	Packing
17	GOR-G.5501	Packing
18	GOR14.5501	Packing
19	IMA.4825	lmb.acces.205x85xh43 int. micronda accoppiato
20	IMSG6.4829	lmballo barra strad.signo6 misure 1100x430x300
21	IPBSG01.4841	lmb.polist.blocco 200x80xh40mm
22	LGR6.5810	Lubricator
23	MA05.0901	Magnet
24	MICROI-C.1617	Microswitch
25	MMCOI2.2620	Thimble
26	MO-L.2640	Spring
27	MO-N.2640	Spring
28	PMCAC10C.4630	Ring
29	PMCAC14.4630	Ring
30	PMCAF01.4630	Ring
31	C3VF-B.2013	Female connector
32	PMCSE25.4630	Seeger ring
33	PMCSE45.4630	Seeger ring
34	PMCS13.4630	Pin
35	PMCS67.4630	Spina elastica a spirale 6x36 ISO 8750
36	PMCTISDF.4630	Pivot head
37	PMCT1.4630	Stretcher
38	PMCU102.4630	Bearing
39	PMCU91.4630	Bearing
40	PMC108B.4630	Chiavetta sblocco forata
41	PMDSC3R01.4610	Pin
42	PMD0140.4610	Fastening rag bolt
43	PMD0563R01.4610	Shaft
44	PMD0566.4610	General unclamping shaft
45	PMD0567.4610	Push rod
46	PMD0568.4610	Unlocking Rod
47	PMD0656.4610	Shaft
48	PMD0657.4610	Gear
49	PMD0672R03.4610	Perno di sblocco dis.672
50	PMD0936.4610	Leaf Case
51	PMD0935.46103	Lid
52	PMD0937.4610	Lever
53	PMD0934R05.4610	
54	PMD0876R01.4610	Flask
55	PMD0918.4610	Plate
56	PMD0933.4610	Foundation plate
57	PMD0998R02.4610	Vite senza fine
58	PMD1003R06.4610	Flangia x signo4
59	PMD1148.4610	Flask
60	PMD1016.4610	Screw
61	PMD1052.4610	Flange
62	PMD1149.4610	Tube
63	PMD1058.4610	Lever
64	PPD0658.4540	Unlocking handle base
65	PPD1386.4540	Disco supporto sblocco
66	PPD0971R01.4540	Disc
67	PPD0972R01.4540	Coupling encoder base
68	PPD0973R01.4540	Lid
69	PPD0992R01.4540	Collarino blocca filo
70	ADSIGNO1	Adhesive
71	PPD0986R02.4540	Ingranaggio condotto dis.0986
72	PPD1006.4540	Bar cover
73	PPD1007R01.45401	Cop_copriforo "signo" seriqra
74	PPD1114.4540	Bar Cap
75	PPD1009.4540	Upper and lower Bar cap
76	PPD1011R01.45401	Guscio sup.maniglia signo ser.
77	PPD1013.4540	Undercut
78	V6X12B.5102	Screw
79	R04.5120	Washer
80	R04A.5120	Washer
81	R06.5120	Washer
82	R06A.5120	Washer
83	R06B.5120	Washer
84	R12.5120	Washer
85	R12B.5120	Washer
86	SGA02R01	Motor
87	TRA-D2.10352	Transformer
88	V10x30B.5102	Screw
89	V12X50.5102	Screw
90	V3X12.5102	Screw
91	V3X25.5105	Screw
92	V4.2X13A.5101	Screw
93	V4.2X9.5.5101	Screw
94	V4.8X13.5101	Screw
95	V4X25.5102	Screw
96	V4X5.5102	Screw
97	V5X15-A.5102	Screw
98	V6.3X22D.5101	Screw
99	V6X22.5102	Screw
100	V6X30.5102	Screw
101	V8X16A.5102	Screw
102	SIA10	Encoder
103	PMCAC41.4630	Ring
104	SIA20/A	Centr.ricambio bar.signo uiver
105	GOR15.5501	Packing
106	PMD0938.4610	Plate
107	V12X30.5102	Screw
108	V6X65.5102	Screw
109	MMF-C.2620	Faston
110	PMD1242.4610	Toggle loop
111	R28.5120	Washer
112	R06A.5120	Washer
113	V5X14A.5102	Screw
114	D5.5110	Nut
115	MPFB3.2601	Wrapper
116	CA43.5320	Wiring
117	BPTC05.4540	Cap
118	BPTC04.4540	Cap
119	ADSIGNO	Sticker "signo"
120	CM-B-1001.1630	Blocco chiave mecc. 90ø2251bis16k-214rivi/514rivi+3daesa51n N°1001