



Code SU2010

Description Motor 24vc-ip66/section. doors

Position	Code	Spare part description
1	BMGSUA.45673	Shell
2	BMGSUB.45673	Upper shell
3	BMGSUCR01.45671	Carter shell
4	BMGSUD.45673	Flange shell
5	BMGSUE.4567	Handle shell
6	BMGSUF.4567	Rope sting shell
7	BMGSUG.4567	Plate shell
8	BMGSUH.4567	Sting shell
9	PMD0272.4610	Rim Gear
10	PMD0273R02.4610	Perno di sblocco "sumo" ot58 5x55.5 dis.0273
11	PMD0274.4610	Plate
12	PMD0278.4610	Unlocking shaft
13	PMD0279.4610	Shaft
14	PMD0339.4610	Flask
15	PPD0276.4610	Bush
16	PPD0277.4610	Bush
17	MICROI-Q.1617	Microswitch
18	MMCOI.2620	Thimble
19	MO-1263.2640	Spring
20	MO-Q.2640	Spring
21	MP0032.2601	Wire press
22	MP0034.2601	Wire press
23	MP0033.2601	Ferrule
24	MP0035.2601	Ferrule
25	M12VA.1850	Junction-box
26	PMCBR1.4630	Brass
28	PMCSE16.4630	Seeger ring
29	PMCU9.4630	Bearing
30	PMC66C.4630	Cotter
31	PMC66D.4630	Cotter
32	GOR-A.5501	Packing
33	GOR-X1.5501	Packing
34	GOR-X.5501	Packing
35	GOR-Q.5501	Packing
36	GOR-G.5501	Packing
37	GOR-Z.5501	Packing
38	GOR-Z01.5501	Packing
39	GOR8.5501	Packing
40	CMSU.5320	Wiring
41	PMD0474.4610	Flask
43	PPD1087.4540	Collar
44	SUA01	Motor
45	V2.9X16.5101	Screw
46	V4.2X9.5101	Screw
47	V4.8X13.5101	Screw
48	V4.8X22.5101	Screw
49	V4X10-A.5102	Screw
50	V4X8.5105	Screw
51	V6.3X19.5101	Screw
52	V6X15B.5102	Screw
53	V5X14A.5102	Screw
54	V8X130.5102	Screw
55	V4.8X9.5-A.5101	Screw
56	R04E.5120	Washer
57	R8.5120	Washer
58	D8.5110	Nut
59	D4-D.5110	Nut
61	EMSU.4870	Label
62	PMD0191R03.46101	Flask
63	PMCG10.4630	Protective covering
64	PMCMFC1.4630	Connector
65	PMCCA2.4630	Steel rope
66	PMCRG.4630	Regulator
68	GOR1.5501	Packing
69	PMD1075.4610	Cotter
71	V4X8-A.5102	Screw
72	D4-B.5102	Nut